

Temperature derating of PVC pipes for pressure applications


When PVC pressure pipes are to be operated at temperatures greater than 20°C, the maximum allowable operating pressure should be reduced by applying a thermal derating factor.

When PVC pressure pipes are to be operated at temperatures greater than 20°C, the maximum allowable operating pressure should be reduced by applying a thermal derating factor.

Table 1

TEMPERATURE DEGREES	DERATING FACTOR
20	1
30	0.87
40	0.7
50	0.58

FIGURE 1 – TEMPERATURE DERATING OF PVC PIPES

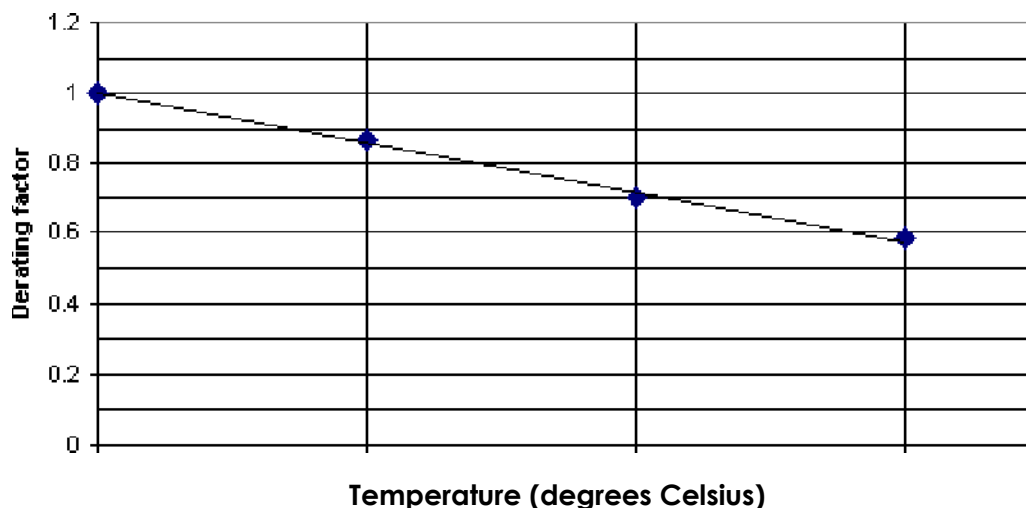

The derating factors have been selected from the International Standard ISO 4422.2, Pipes and fittings made of unplasticised polyvinyl chloride (PVC-U) for water supply - Part 2: Pipes (with or without integral sockets). The table has been extended from 45°C up to 50°C and interpolation may be used to select a derating factor for temperatures between those nominated.

These derating factors may be applied to PVC-U, PVC-M and PVC-O pipes.

DESIGN OPERATING TEMPERATURE

The material temperature under consideration is the average temperature of the pipe wall under operational conditions.

In most instances it may be assumed that the pipe temperature is equal to the elevated temperature of the fluid being carried.

Where a temperature differential exists between the fluid in the pipe and the external environment, the operating temperature may be taken as the mean of the internal and external pipe surface temperatures.

For the usual case of turbulent flow of fluid inside the pipe, the inside surface temperature may be taken as the temperature of the fluid. The rate of heat transfer across the wall of a PVC pipe is low, and provided the exterior of the pipe is well ventilated, the external surface will be near ambient. Where heat transfer to or from the surrounding material is very slow, the external surface temperature will be near to that of the internal surface.

It may be necessary in critical cases to establish surface temperature characteristics by experiment. For the situation of a buried pipeline with flowing water, an appropriate 'rule of thumb' is:

$$T_m = \frac{2T_w + T_s}{3}$$

T_m = mean material temperature T_w =
water temperature T_s = soil temperature

It should be noted that the pressure condition where flow is stopped should also be checked. In this event, water temperature and outside temperature will equalise.

PIPA wishes to acknowledge and thank all our Technical Committee members and Industry Consultants for their contribution, expertise, and assistance in the development of this technical document.

DISCLAIMER - In formulating this document PIPA has relied upon the advice of its members and, where appropriate, independent testing. Notwithstanding, users of the document are advised to seek their own independent advice and, where appropriate, to conduct their own testing and assessment of matters contained in the document and to not rely solely on the document in relation to any matter that may risk loss or damage. PIPA gives no warranty concerning the correctness or accuracy of the information, opinions and recommendations contained in the document. Users of the document are advised that their reliance on any matter contained in the document is at their own risk.